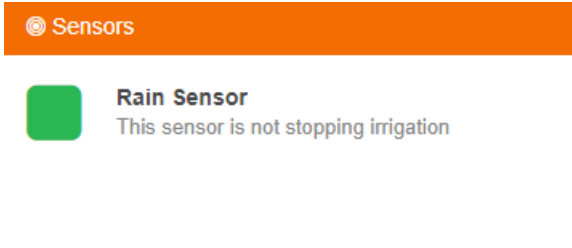
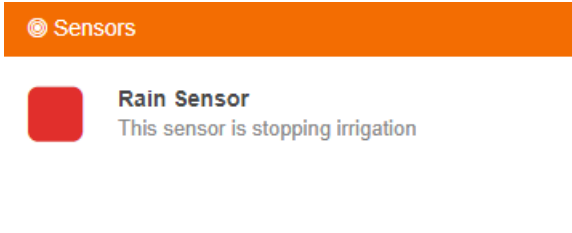


# What does the sensor status mean?

Please reference the chart below for the different sensor status's when the sensor state is changed once you've successfully set up your sensor through the Hydrawise application.

**NOTE:** Normally closed (Default Setup) all hunter klik sensors.

Sensor Status		
<b>GREEN</b>	Dry - Not Stopping Irrigation	Water
		
<b>RED</b>	Wet - Stopping Irrigation	No Water
		

**Note:** A good example would be a simple switch where closed would represent **ON** position and open would mean the **OFF** position.

For more information on configuring sensors, check our guide [here](#) <sup>(1)</sup>.