What Does the Sensor Status Mean?

Please reference the chart below for the different sensor status's when the sensor state is changed once you've successfully set up your sensor through the Hydrawise application.

NOTE: Normally closed (Default Setup) all hunter clik sensors.

Sensor Status

GREEN Dry - Not Stopping Irrigation Water

RED

Wet - Stopping Irrigation No Water

Note: A good example would be a simple switch where closed would represent**ON** position and open would mean the **OFF** position.

For more information on configuring sensors, check our guidehere [1].