


How do I check my signal strength?

To check your signal strength, you will need to go to your controller's touch screen. From there, click on:

1. Click **SETTINGS**
2. Click **WIRELESS**
3. Click **WIRELESS NAME**

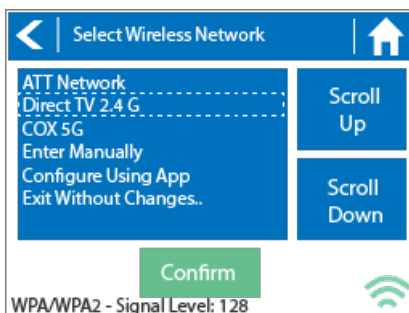

This will display the list of networks available to your controller.

Click on your desired network. The signal strength will be displayed for that connection on the bottom left side of the screen.

NOTE: You need to click on the network name to see the signal strength and then click confirm if you want to select that network. The arrows are used to scroll up and down if you have more connections than the screen can display. You will still need to click your chosen network before clicking **CONFIRM**.