

# Changing Wireless Settings

1. From your Hydrawise controller, click on **SETTINGS**.
2. Click on **WIRELESS** to change any of the following settings.
  - **NAME:** From the Wireless settings screen, click on **WIRELESS NAME** to change or manually enter the name of your wireless access point.
  - **PASSWORD:** Click on **PASSWORD** if you want to change the password for your wireless connection.
  - **SECURITY TYPE:** Click **SECURITY TYPE** to change the security type to WPA2/WPA2 personal.

