Changing Wireless Settings

- 1. From your Hydrawise controller, click on **SETTINGS.**
- 2. Click on WIRELESS to change any of the following settings.
 - **NAME:** From the Wireless settings screen, click on **WIRELESS NAME** to change or manually enter the name of your wireless access point.
 - PASSWORD: Click on PASSWORD if you want to change the password for your wireless connection.
 - SECURITY TYPE: Click SECURITY TYPE to change the security type to WPA2/WPA2 personal.