

# Account - Linking Controller

After you receive your Hydrawise irrigation controller, you will need to link it to your Hydrawise account.


There are two locations where you can link your controller to your account:


- During the setup wizard (optional)
- From the controller **Dashboard**

**NOTE:** You only need to link your controller to your account once. If you provided a serial number when going through the setup wizard, you've successfully linked your controller to your account and you can ignore these instructions.

To link your controller through your account Dashboard, follow these steps:

1. [Log in to your account](#) <sup>(1)</sup>.
2. On the Dashboard, click on the **Settings icon** located on the blue Watering Schedule bar. Then click the **Link to controller...** button.
3. Enter your controller's **serial number**. The eight-character serial number is found on the side of the unit. The serial number is not case-sensitive.

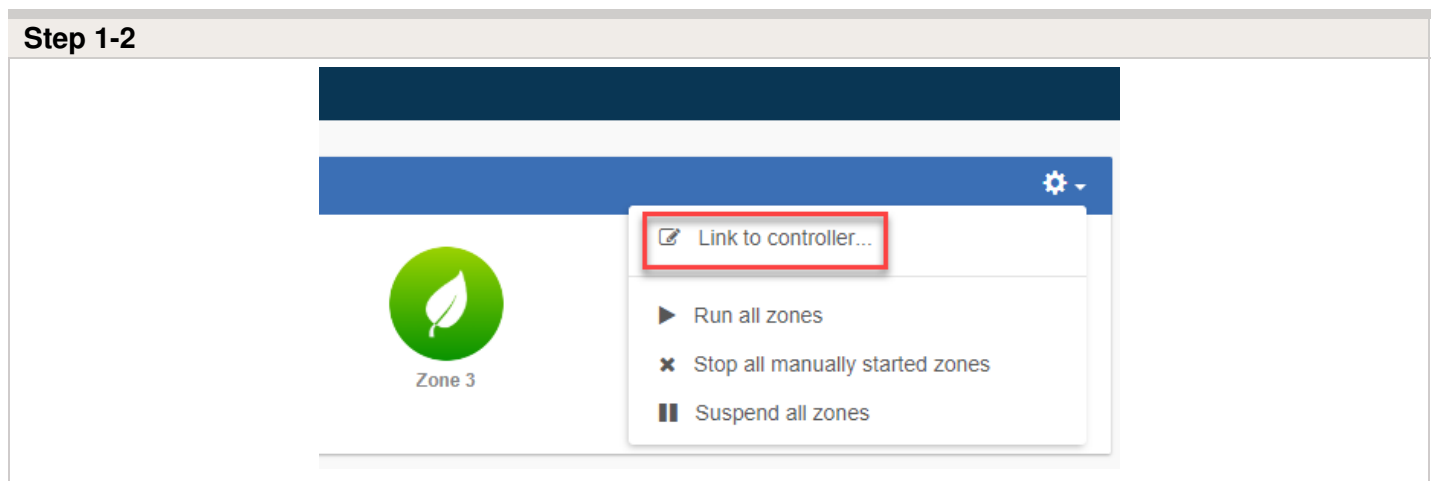

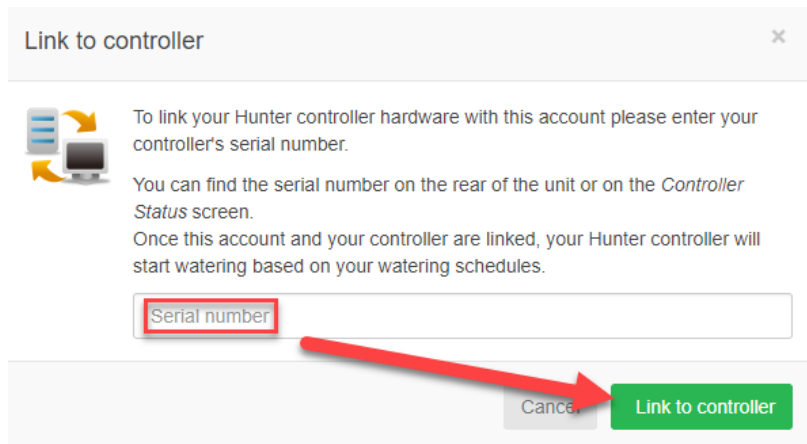

Once you've entered the serial number, your controller will automatically download your settings and begin watering based on your watering schedules.