

# What is the difference between the 6-zone and 12-zone models?

Apart from the number of zones, the 12-station model can detect faulty wiring and has the capability to expand the number of stations using a 12-zone Expansion Module. Full details are shown in the table below.

Hardware Comparison		
	Hydrawise 6 Zone Standard	Hydrawise 12 Zone Pro
Number of Zones	6	12
Screen Type	2.8" Color TFT	2.8" Color TFT
Physical Interface	Touchscreen	Touchscreen
Sensor Inputs	2	2
Start/Stop Zones from Unit	✓	✓
WiFi certified	✓	✓
Configuration without WiFi	✓	✓
Expansion Capability	✗	Up to 36 Zones
Broken Wiring Detection	✗	✓
Case Style	Sealed	Sealed
Wire Entry	Rear entry or Bottom entry via electrical conduit	Rear entry or Bottom entry via electrical conduit
Wiring Protection	Sealed wiring cover	Sealed wiring cover

Hydrawise Confidential