

# Can I run more than one zone at a time?

You can only run one zone at a time (this is how a normal irrigation controller works).

Running multiple zones at once is usually not possible due water-pressure limitations.

As with any standard irrigation controller, you can wire multiple solenoids/valves to the same zone output if you want. We support up to two solenoids per zone output, plus a master valve, for a total of three solenoids at any given time.