


Controller - Factory Default

Please follow the steps below to perform a factory reset on your controller. When the controller goes back online, the settings in the software will sync back into controller.


1. From the home screen, tap on **Settings**.
2. Next, press **Config**.
3. Press **Factory Default**.
4. Finally, press the **Erase Config**.

STEP 1




The screenshot shows the Hydrawise home screen with four main menu items: 'Zones', 'Settings', and 'Status'. The 'Settings' button is highlighted with a red rectangular box. A wireless signal icon is visible in the bottom right corner.

STEP 2

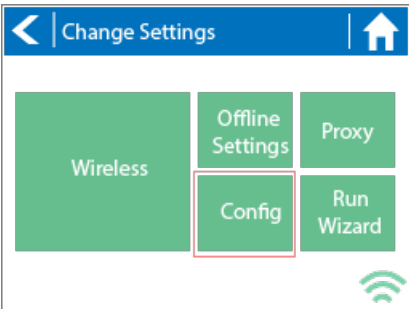


The screenshot shows the 'Change Settings' screen with a blue header bar containing a back arrow and a home icon. Below the header are several menu items: 'Wireless', 'Offline Settings', 'Proxy', 'Config', and 'Run Wizard'. The 'Config' button is highlighted with a red rectangular box. A wireless signal icon is visible in the bottom right corner.


STEP 3



This section is currently empty, intended for a screenshot of the third step in the process.

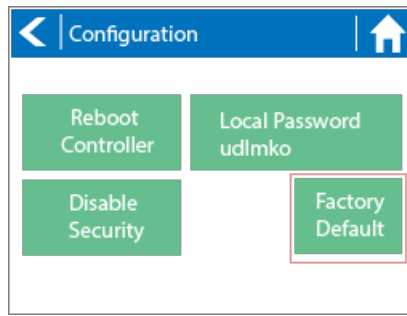

STEP 4

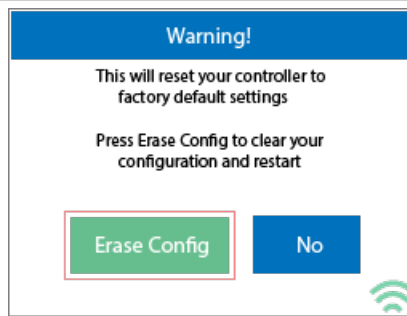

Congratulations, you have now successfully factory reset your controller. The controller is now ready for fresh configuration settings, either manually or automatically through synchronization with your Hydrowise account.

To link your controller to your account, refer to [Linking Your Controller to Your Account](#) ⁽¹⁾.