
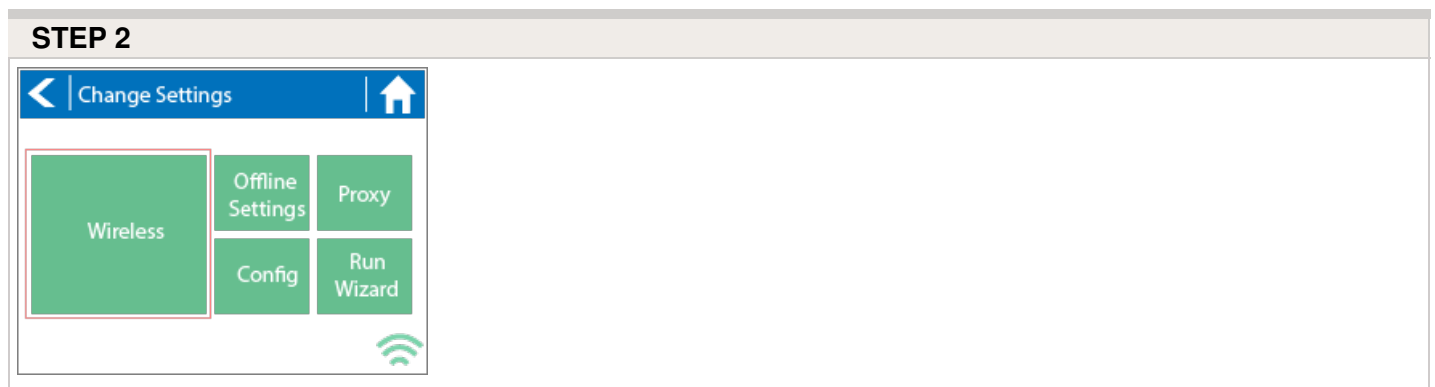




Wireless - Static IP Address

In this guide, you will learn how to set up a static IP address instead of using DHCP.

1. From the controller's home screen, tap on **Settings**.
2. Tap on **Wireless**.
3. Tap on **Network Mode - DHCP Mode**.
4. Tap on **Enter Network Settings Manually** then tap on **Confirm**.

>

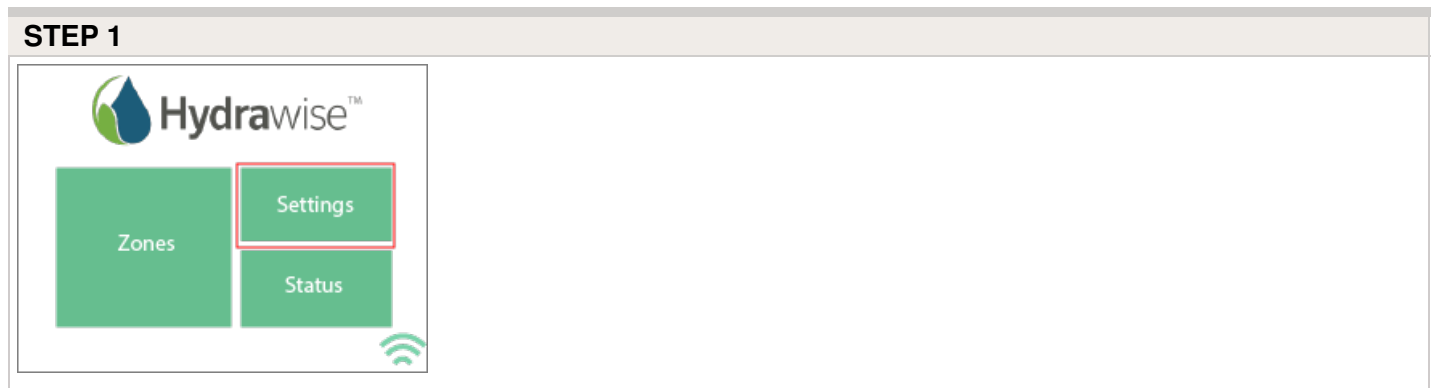

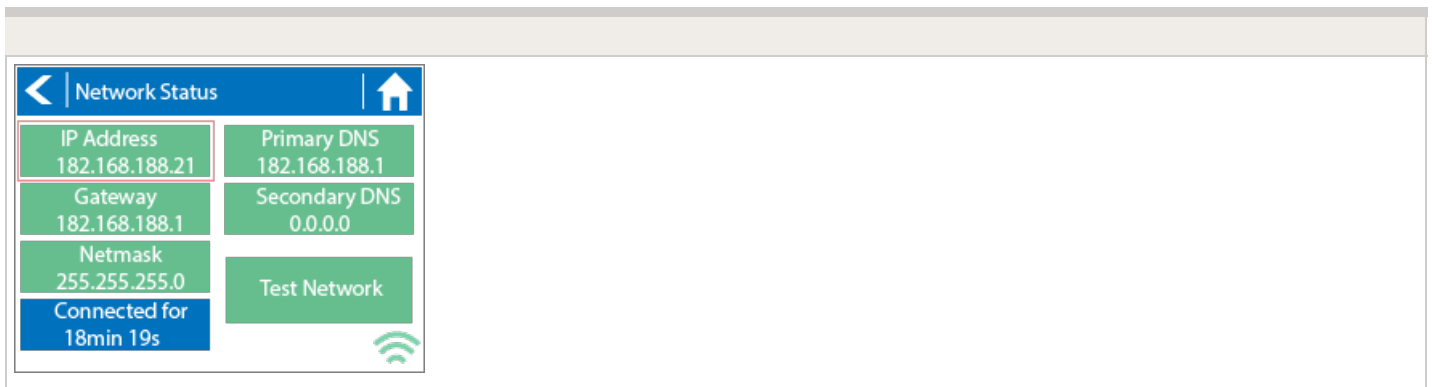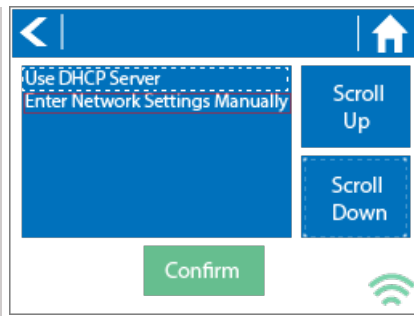

Once you have completed entering all the IP settings manually, click on **Test Network**. This ensures the controller has successfully connected to your router using the **Static IP Settings** that have just been set.

For more information, contact us via email at support@hydrawise.com ^[1] or call us using the numbers on our [Contact Us](#) ^[2] page.