
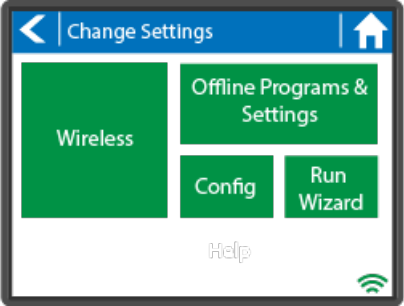
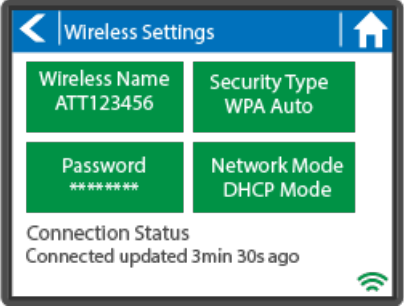
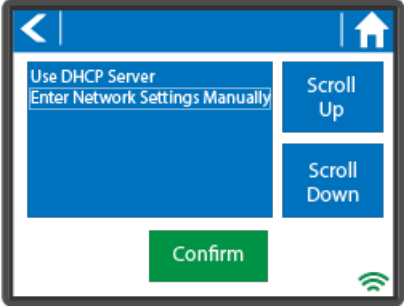


# Setting Up a Static IP Address

**STATIC IP** addresses are useful if you want to consistently have the same **IP** address. In this guide, you will learn how to set up a static IP address instead of using DHCP.

**IMPORTANT (X2 WAND Controllers Only):** Configuring a static IP for **WAND** is only achievable through the user's Router Settings network webpage after the **WAND** has connected to the Wi-Fi network. With **WAND**, there is no option to manipulate DHCP like in our touchscreen controllers.

STEP 1	STEP 2
From the controller's home screen, tap on <b>SETTINGS</b> .	Select <b>WIRELESS</b> .
	
STEP 3	STEP 4
Select <b>NETWORK MODE - DHCP MODE</b> .	Select <b>ENTER NETWORK SETTINGS MANUALLY</b> then tap on <b>CONFIRM</b> . Finally, select the <b>IP address</b> and <b>ENTER DNS</b> address.
	

--	--

Once you have completed entering all the IP settings manually, click on **Test Network**. This ensures the controller has successfully connected to your router using the **Static IP Settings** that have just been set.