

# Setting Up a Static IP Address

**STATIC IP** addresses are useful if you want to consistently have the same**IP** address. In this guide, you will learn how to set up a static IP address instead of using DHCP.

**IMPORTANT (X2 WAND Controllers Only):** Configuring a static IP for **WAND** is only achievable through the user's Router Settings network webpage after the **WAND** has connected to the Wi-Fi network. With **WAND**, there is no option to manipulate DHCP like in our touchscreen controllers.

## STEP 1

From the controller's home screen, tap on**SETTINGS**.



## STEP 2

Select **WIRELESS**.



## STEP 3

Select **NETWORK MODE - DHCP MODE**.



## STEP 4

Select **ENTER NETWORK SETTINGS MANUALLY** then tap on **CONFIRM**. Finally, select the **IP address and ENTER DNS** address.



Once you have completed entering all the IP settings manually, click on**Test Network**. This ensures the controller has successfully connected to your router using the **Static IP Settings** that have just been set.