


# How to Change the Run Times in Advanced Mode

If you choose to edit the **RUN TIME** for each station (zone) in **ADVANCED MODE**, please review the steps and screenshots below to access this feature. For information on changing your run times in **STANDARD MODE**, please visit the support article [here](#). [1]

The following fields are also available when accessing this feature:

Time and Length	
Watering Length:	The number of minutes this zone will run for each time.
Watering Frequency:	Choose how often to water the zone. The most common is Every Program Start Time.
Schedule Adjustment:	Choose how to adjust the watering time based on your weather triggers.

## Edit Run Times

1. Sign-in to your [Hydrawise account](#) [2]using your email.
2. Click on **ZONES** at the bottom of the app or **ZONES AND SCHEDULES** on a web browser from the home dashboard.
3. Scroll to the **ZONE** that requires the change and select the  icon.
4. Select **NEXT** at the bottom of zone details.
5. Enter the watering **RUN TIME** in minutes for the zone in the open text box under**WATERING LENGTH**. Select **DONE**, then **OK** to save.

### STEP 1-2

□

### STEP 3

□

### STEP 3

□

### STEP 4-5

□