


Delete Controller

If you have the need to delete a controller from your account, please use the steps and screenshots listed below:

1. Make sure you are **NOT** currently configuring the controller you would like to delete. Click on the **"current controller name."**
2. Change controller by selecting another one from the **"Choose your controller"** category.
3. Click on the top right tab to access the **"My Account"** settings.
4. Scroll down to the bottom controller section. Click on the **"three selection dots"** to the right of the controller name you would like to edit.
5. Choose **"Remove Serial Number"** to remove controller from the account.
6. Next, choose **"Delete"** to remove controller from the account.




The controller will now be removed from you account.

STEP 1

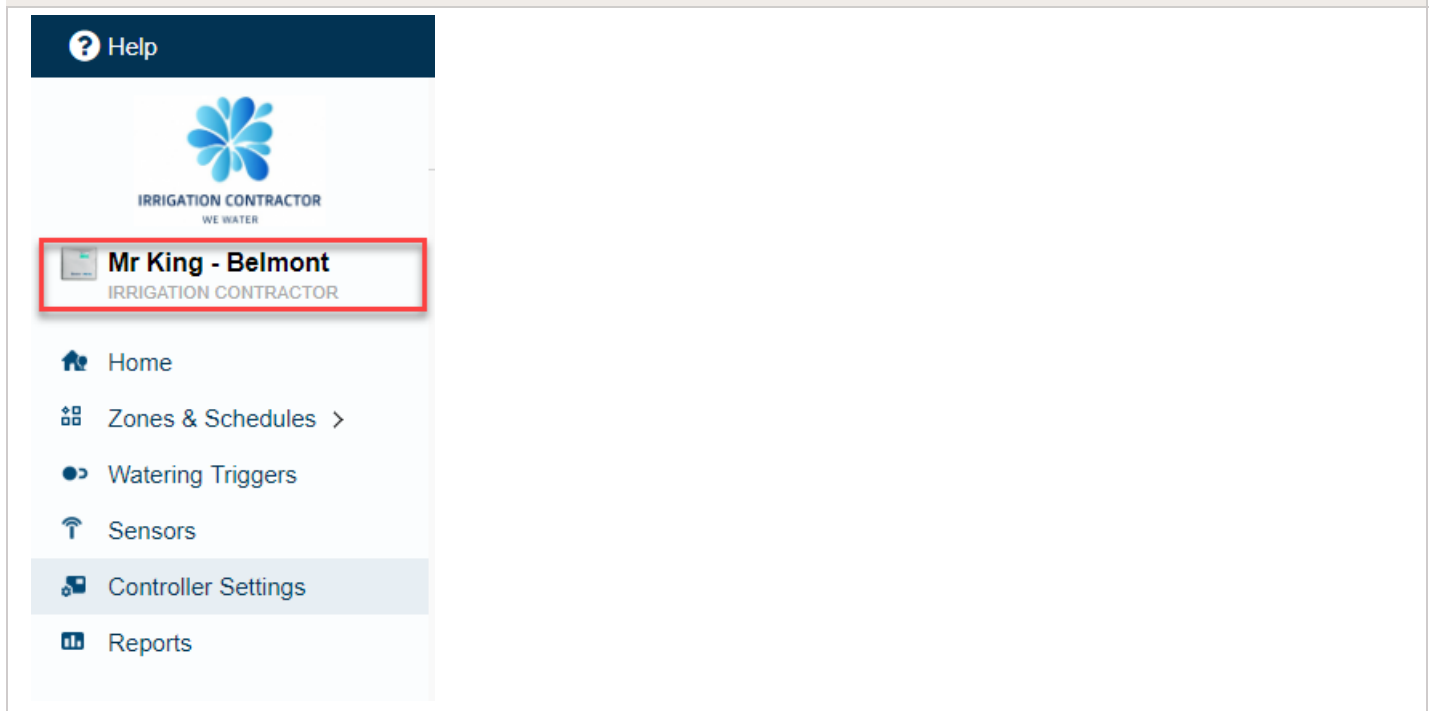


STEP 2

Choose your controller ×

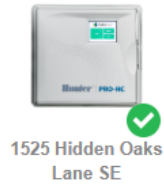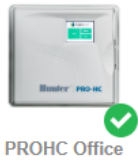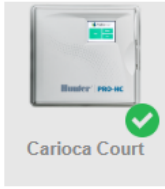

STEP 3

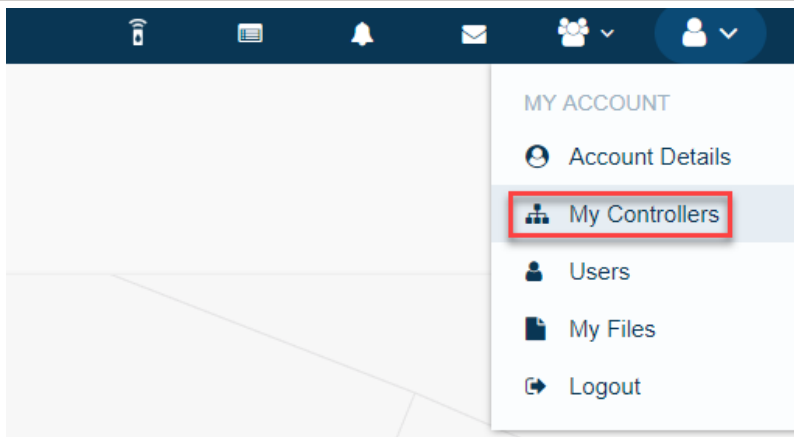

STEP 4

My Controllers

Search

CONTROLLERS



Carioca Court



PROHC Office



- Configure
- Delete
- Remove Serial Number
- Generate Job Sheet
- Move Controller

STEP 5

My Controllers

Search

CONTROLLERS +

- Carioca Court
- PROHC Office

- Configure
- Delete
- Remove Serial Number
- Generate Job Sheet
- Move Controller

STEP 6

My Controllers

Search

CONTROLLERS +

- Carioca Court
- PROHC Office

- Configure
- Delete
- Remove Serial Number
- Generate Job Sheet
- Move Controller

NOTE: If you attempt to delete a controller that you are currently configuring, the message will appear below.



Information



You cannot delete a controller you are currently configuring

OK