


Adding a Controller

For information on adding a controller to your account on the PC, please see the steps and screenshots below:

1. Select the **"My Account"** drop down on the upper right hand side on the dashboard.
2. Select **"My Controllers."**
3. Click the **+** button in the my controllers section.
4. Add the new controller by inputting the name, serial number, location and model.
5. Click **"create"**.

Plan	Max Controllers
Home Plan	3 Controllers
Enthusiast Plan	5 Controllers

STEPS 1-2

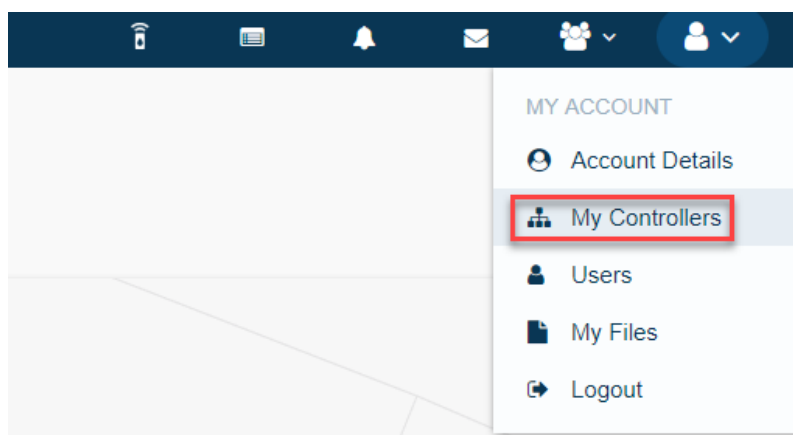

STEP 3

My Controllers

Generate job sheet, change controller model, add or remove contr

My Controllers

CONTROLLERS +

Golf Room

Instructor Pro-HC

PI

STEP 4

Add New Controller

Controller name

Enter the name of the new controller

Serial number

If you know the serial number of the controller enter it here, otherwise leave it blank

Location

Please enter your location

Cancel

< Prev

Next >


Create

STEP 5

Add New Controller

Controller model

Please choose your controller model




HC

6 or 12 Zone Controller

☐ 6 Zones

☐ 12 Zones




Pro HC Indoor/Outdoor

6, 12 or 24 Zone Outdoor Controller

☐ 6 Stations

☐ 12 Stations

☐ 24 Stations



HPC

Pro C WiFi Facepanel Upgrade

☐ Up to 16 Stations

Cancel

< Prev

Next >

Create

Copyright 2024 Hunter Industries. All Rights Reserved.

3