

# How do I set global default watering triggers?

 
Contractors now have an option to set default watering triggers for new customers in the customer wide settings.

When a new controller is created (Contractor Portal only), the controller will automatically get the contractor's default Watering Triggers. If you want to have different settings for a specific controller, then they can be changed in the normal way.

Please view the steps to access this feature:

1. Click on the "**Manager**" icon on the upper right hand side, then "**Customer Wide Settings.**"
2. Click on the "**Default watering triggers**".

**NOTE:** The trigger can be turned OFF completely by using the slide bar option within this water trigger section.



### Predictive Watering™ Adjustments

The Predictive Watering Adjustments interface consists of several control panels:

- Temperature Thresholds:** Three panels with sliders from 0 F to 130 F. The first is set to 68 F with the toggle "Don't water when today's forecast temperature is less than" turned on. The second is set to 77 F with the toggle "Water 30% less when today's forecast temperature is less than" turned on. The third is set to 86 F with the toggle "Water 15% more when today's forecast temperature is above" turned on, and a secondary toggle "and humidity is below 100%" is also turned on.
- Rain and Wind Speed:** Two panels with sliders. The first is set to 100% with the toggle "Don't water when the chance of rain is higher than" turned on. The second is set to 62 mph with the toggle "Don't water when today's forecast wind speed is higher than" turned on.
- Forecast-based Smart Watering:** Two panels with toggle switches. The first is "Use forecast temperature to predict smart watering" (turned on). The second is "Use forecast rainfall to predict smart watering" (turned on).

### Weather Station Adjustments

The Weather Station Adjustments interface includes two panels with sliders from 0 in to 5 in:

- The first panel is set to 0.1 in with the toggle "Don't water when the last 24hr rainfall is higher than" turned on.
- The second panel is set to 0.4 in with the toggle "Don't water when the last 7 days rainfall is higher than" turned on.

It is also possible to re-apply Watering Triggers to one or all of your customers if they have changed from the settings in the Contractor Portal:

Please view the steps to access this feature:

1. Click on **"Re-Apply Settings"**.
2. Choose all controllers or selected controllers to update the changes and select **"OK"**

Re-apply settings ✕

Re-apply settings to

Selected controllers ▼

Please choose the controllers that you want to re-apply the default Watering Triggers to

Controllers	
Carioca Court	⇄
PROHC Office	
HPC-FP Office	
1525 Hidden Oaks Lane SE	
Garrison Road	
10 Savanna Lane	

Cancel ✓ OK