


# How to Configure Your Flow Meter

## Assigning the Meter

Please view the steps and screenshots to access this feature:

1. Click on **SENSORS** from the home dashboard.
2. Click on **ADD SENSOR TO CONTROLLER**.
3. Choose a **NAME**, **SENSOR TYPE**, and **INPUT** (flow-related only).
4. Choose which **ZONES** should be linked to the sensor.
5. Click **OK** when finished.

### Step 1

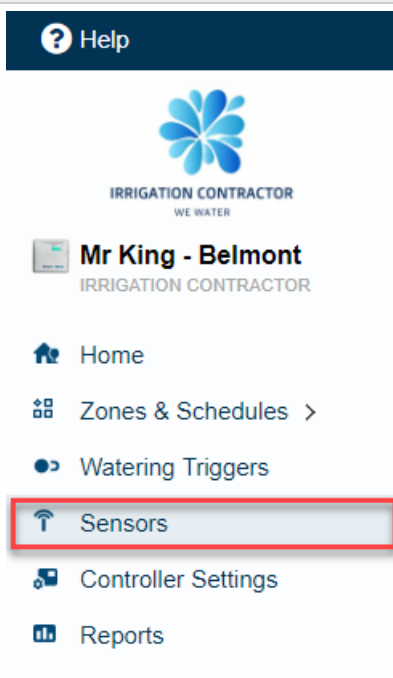

### Step 2

## Sensors

Hydrawise supports standard rain sensors, soil moisture sensors and open/closed contact flow meters. [+](#)



Add Sensor to Controller

### Step 3

#### Add Sensor



##### Sensor details

##### Set zones

##### Sensor Name

Assign a descriptive name for this sensor

Flow Meter

##### Type of Sensor

Choose the type of sensor you have installed. You can also create a custom sensor type if you have something non standard.

¾ inch NPT Flow Meter

Create New Sensor Type...

##### Controller Input

Choose the input on the controller that this sensor is wired to

SEN-1

Cancel

< Prev

Next >

✓ OK

### Step 4

Add Sensor

Sensor details

Set zones

Select Zones

Select the zones which will use this sensor

Available zones

Carioca Court

Back Grass

Back Drip

Diamond Street Controller

Front Grass

Front Flowers

Back Drip

⇄

Selected zones

Carioca Court

Front Grass

Street Drip

Front Drip

Cancel

< Prev

Next >

✓OK

Copyright 2024 Hunter Industries. All Rights Reserved.

3