


How to Configure Your Flow Meter

Assigning the Meter

Please view the steps and screenshots to access this feature:

1. Click on **SENSORS** from the home dashboard.
2. Click on **ADD SENSOR TO CONTROLLER**.
3. Choose a **NAME**, **SENSOR TYPE**, and **INPUT** (flow-related only).
4. Choose which **ZONES** should be linked to the sensor.
5. Click **OK** when finished.

Step 1

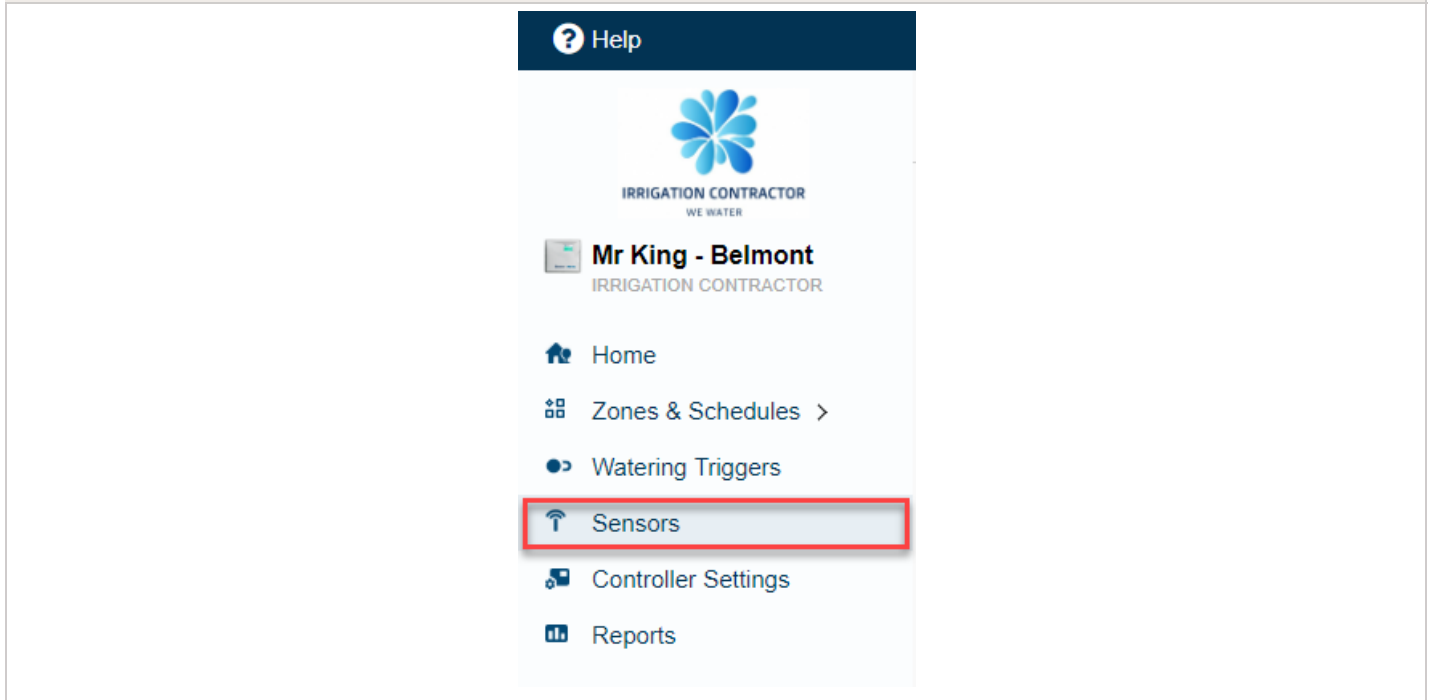


Step 2



Sensors

Hydrawise supports standard rain sensors, soil moisture sensors and open/closed contact flow meters. [+](#)

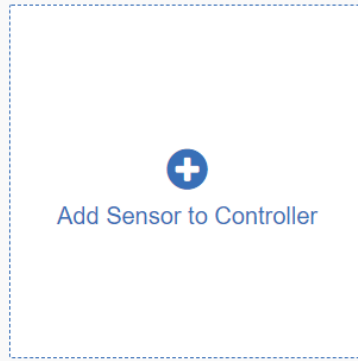

Step 3

Add Sensor ✕

Sensor details ▶ **Set zones**

Sensor Name
Assign a descriptive name for this sensor

Type of Sensor
Choose the type of sensor you have installed. You can also create a custom sensor type if you have something non standard.

Create New Sensor Type...

Controller Input
Choose the input on the controller that this sensor is wired to

Cancel < Prev Next > ✓ OK

Step 4

Add Sensor ×

Sensor details ▶ **Set zones**

Select Zones

Select the zones which will use this sensor

Available zones

Carioca Court
Back Grass
Back Drip
Diamond Street Controller
Front Grass
Front Flowers
Back Drip

⇄

Selected zones

Carioca Court
Front Grass
Street Drip
Front Drip

Cancel < Prev Next > ✔ OK