

# Stacking Zones Manually

In manual mode, you can stack zone runs when a zone is already running. As you turn on individual zones, they will be put in a queue. Each zone will run when the previous zone is finished.

**Note:** This is only available on **SINGLE ZONE** runs. All other manual run features (e.g., All zones, Programs, Zone Tester) will automatically **CANCEL** any current run cycles.

Here's how to use this feature:

1. Sign in to your [Hydrawise account](#) <sup>[1]</sup>.



2. Click any **ZONE** (  ) icon.

3. Select the **PLAY** (  ) button.

- **SINGLE ZONE:** This allows you to manually start a single zone for the scheduled time or a time you manually change.

4. Check the box **STACK ZONE RUNS IF SCHEDULING CONFLICT** to enable this feature.

5. Click **START**.

## Manual Start a Zone View

