


# Stacking Zones Manually

While in manual mode, you have the ability to stack zone runs when there's already a zone running. As you turn on zones individually, they will be put in a queue waiting to run when the last one is finished.

**Note:** This is only available on "**Single Zone**" Runs. All other types of manual run features (eg. All zones, Programs, Zone Tester) will automatically **CANCEL** any current runs.

Please view the steps and screenshots to access this feature:

- From the home screen, click on the "**Zone Icon.**"
- Select the "**Play Button.**"
- "**Single Zone**"– Allows you to manually start a single zone for the scheduled time or a time you manually change.
- Check the box "**Stack zone runs if scheduling conflict**" to enable this feature.
- Click "**Start**"

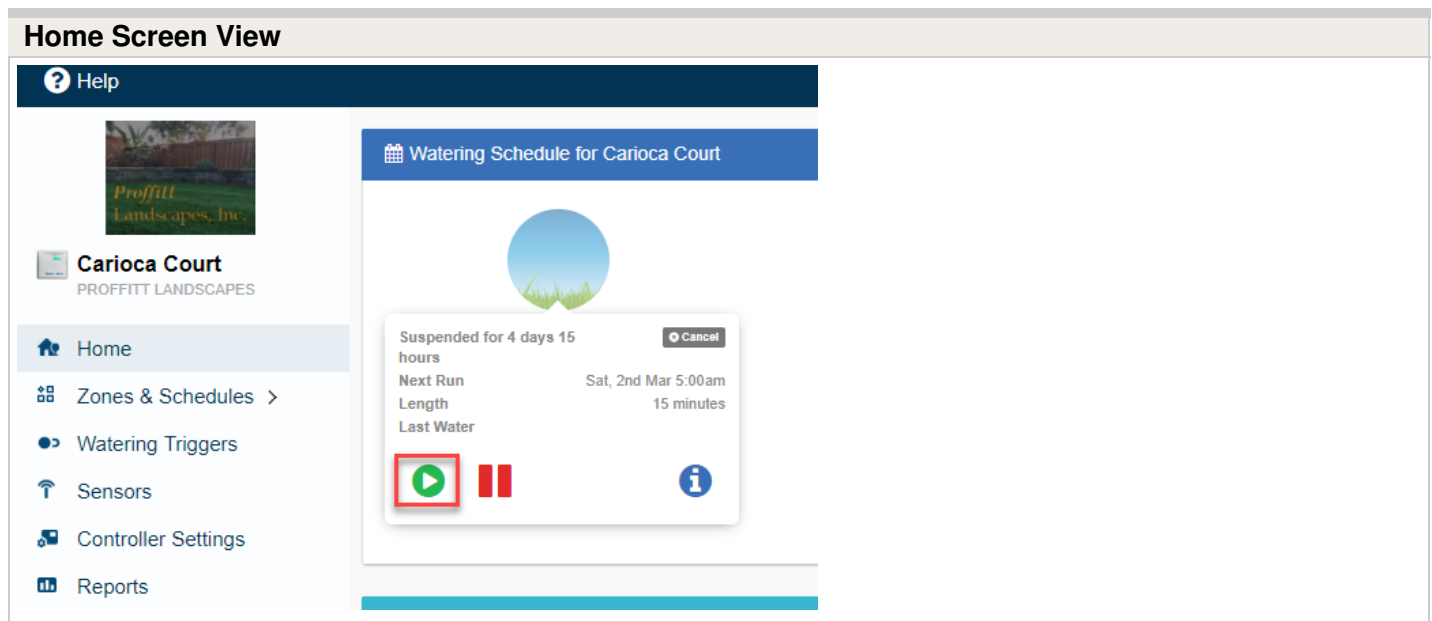

## Manually Start a Zone

Single Zone

All Zones

Programs

Zone Tester

Front Grass


Street Drip

Front Drip

Back Grass

Back Drip

Back Grass is not scheduled to run

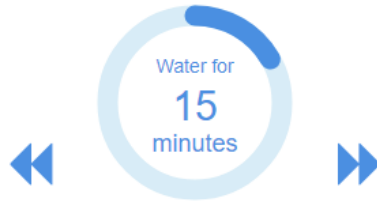

- Ignore rain sensor status
- Stack zone runs if scheduling conflict



Close

▶ Start