







How to Add, Edit, and Customize Zones

The **ZONES** section allows you to configure zone names, set zone icons and images, view zone details, set up Cycle & Soak, fine-tune your watering, and configure a master valve if one is installed.

ZONE ICON	DESCRIPTION
	Use this function to see an overview of when your system will water and for how long.
	Use this function to make changes to an existing zone like icons, zone names etc.
	Use this function to add a photo for referencing the zone. See links for details on mobile ^[1] and desktop ^[2] .
	Use this function to delete the configured zone and all included information.

The steps and screenshots below show how to add, edit, and customize zones.

1. Click on **ZONES & SCHEDULES** from the home Dashboard. Then select **ZONES**.
2. If you have a master valve or pump start relay, select **YES** to enable it. Visit this [section](#) ^[3] for more configuration details.
3. Select the  button to add a **NEW** zone. Click the  icon to edit an existing zone.
4. Choose a **ZONE NAME** (e.g., Front Yard).
5. Choose a **ZONE NUMBER** (e.g., If the front yard is wired to zone one in the controller, select ZONE 1).
6. Choose the **ICON** for your zone. If an image is assigned to zone, that icon will also appear here.
7. Choose whether you want to enable the [CYCLE & SOAK](#) ^[4] feature.
8. Finally, the **ADVANCED** setting lets you select a **WATERING ADJUSTMENT** as a percentage (e.g., you can set the zone to water 10% less of that run time).

Step 1

Zones & Schedules

Zones

Programs



Front Grass

Zone 1



Run Length

20 mins in Home Program



Cycle & Soak

Disabled



Step 2


Configure zone names, icons and images

Master valve: Not assigned 

Step 3



Front Landscape

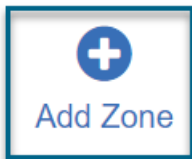

Step 4-6

Zone Details  Cycle & Soak  Advanced

Zone Name

Assign a name for this irrigation zone

Enter zone name

Zone Number

Choose the zone number that this zone is wired to on your Hunter controller

Not assigned

Zone Icon

Choose the icon you want to see on the dashboard for this zone



Cancel

< Prev

Next >

✓ OK

Step 7

Zone Details  Cycle & Soak  Advanced

Cycle & Soak

Cycle and soak reduces runoff from each zone by pausing an irrigation cycle 

- ☒ Do not enable cycle and soak
- ☐ Enable cycle and soak

Cancel

Next >

✓ OK

Step 8

Zone Details

Cycle & Soak

Advanced

Master valve

Use Global Master Valve Setting

Disable Master Valve

Water Adjustment

Fine tune your watering if your zone appears to be too dry or wet

Water less

Normal

Water more

Water 10% less

Cancel

< Prev

Next >

OK