



How to Add, Edit, and Customize Zones

The **ZONES** section allows you to configure zone names, set zone icons and images, view zone details, set up Cycle & Soak, fine-tune your watering, and configure a master valve if one is installed.

ZONE ICON

-
-
-
-

DESCRIPTION



Use this function to see an overview of when your system will water and for how long.

Use this function to make changes to an existing zone like icons, zone names etc.

Use this function to add a photo for referencing the zone. See links for details on [mobile](#) [1] and [desktop](#) [2].

Use this function to delete the configured zone and all included information.

The steps and screenshots below show how to add, edit, and customize zones.

1. Click on **ZONES & SCHEDULES** from the home Dashboard. Then select **ZONES**.
2. If you have a master valve or pump start relay, select **YES** to enable it. Visit this [section](#) [3] for more configuration details.
3. Select the  button to add a **NEW** zone. Click the  icon to edit an existing zone.
4. Choose a **ZONE NAME** (e.g., Front Yard).
5. Choose a **ZONE NUMBER** (e.g., If the front yard is wired to zone one in the controller, select ZONE 1).
6. Choose the **ICON** for your zone. If an image is assigned to zone, that icon will also appear here.
7. Choose whether you want to enable the [CYCLE & SOAK](#) [4] feature.
8. Finally, the **ADVANCED** setting lets you select a **WATERING ADJUSTMENT** as a percentage (e.g., you can set the zone to water 10% less of that run time).

Step 1

-

Step 2

-

Step 3

□

Step 4-6

□

Step 7

□

Step 8

□