

Using One Flow Meter for Two Controllers

For this installation, we suggest a few tips to make sure you do not receive any unnecessary alerts.

When using two controllers on the same flow meter, there are two alerts we do not recommend using.

1. **HIGH FLOW LEAK** - High water usage with no zones running.
2. **SLOW LEAK** - Water usage over last hour with no zones running.

These alerts are controller specific so when the controller with the flow meter is not in operation, it does know about the other controller operation.

Tips:

1. The inter station delay ^[1] should be set for 10-30 seconds. We do not recommend any higher.
2. Change the gallons in the alert to be **HIGHER** (e.g. alert from 5 gallons to 20 gallons).
3. Wire to only **ONE** of the two controllers.
4. Configure the sensor to the controller that has the wire connection.
5. Move **AVAILABLE** zones from both controllers into **SELECTED ZONES**.

For more information on configuring and wiring, visit support section here ^[2].

Add Sensor

Sensor details

Set zones

Select Zones

Select the zones which will use this sensor

Available zones

HCC - Carioca Court Controller

Front Grass

Street Landscape

Front Landscape

Back Landscape

Back Grass

PRO-HC - Carioca Court

Selected zones

Cancel

< Prev

Next >

✓ OK

Following these parameters should allow the system to run normal when using one flow meter with multiple controllers.