


# Controller Running at Incorrect Time

Your controller may be synced to Melbourne Australia time. The location is synchronized after the settings are configured in the HydraWise app. The time zone and forecast are automatically set when the **location** is entered during the app set up wizard process. In the event this setup needs to be changed or updated, we recommend editing the setting in the application under the **Weather Station**.

Please view the steps and screenshots to set the weather station location:

1. Click on the **CONTROLLER SETTINGS** tab on the left hand side.
2. Select **WEATHER STATIONS**.
3. Enter the **COMPLETE STREET ADDRESS**.
4. Regional settings will **AUTOMATICALLY** be updated to the correct timezone.

## Step 1

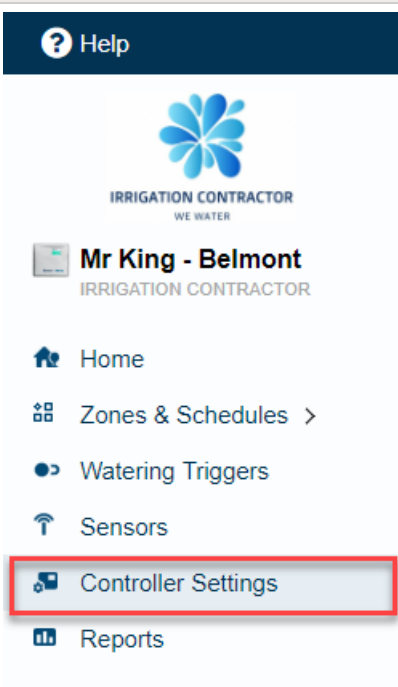

## Step 2

### Settings

Controller Settings

Weather Stations

Expanders

Offline Adjustments

