

PRO-HC - Connecting Sensors or Flow Meters (Optional)

Pro-HC Controller supports most open/closed contact type of sensors such as Hunter rain and soil moisture sensors.

Connect one sensor wire to COMMON on the controller.

Connect the Normally Closed or Normally Open wire from the sensor to SEN-1 or SEN-2 on the controller and configure in the Hydrawise app.

For full details, refer to the instructions provided with your sensor, or flow meter.

Once you've wired your sensor you must configure it in your Hydrawise account.

Wiring for standard Hydrawise 0.75" (20 mm) or 1" (25 mm) flow meters is as follows:

FLOW METER WIRE	LABEL ON CONTROLLER
Blue	SEN-1, SEN-2
White	SEN COM
Red	Not connected

Wiring for open/closed contact sensors is as follows:

SENSOR WIRE	LABEL ON CONTROLLER
Normally Open/Normally Closed wire	SEN-1, SEN-2
Second (common) wire	SEN COM

See [Configuring Sensors](#) ^[1] for full instructions on setting up sensors.