## **PRO-HC - Connecting Sensors or Flow Meters (Optional)**

The Pro-HC Controller supports most open/closed contact types of sensors. Compatible Hunter flow meters and sensors include the  $\underline{\mathsf{HC}} = [1], \underline{\mathsf{MINI-CLIK}}^{\mathsf{IM}} = [3], \underline{\mathsf{FREEZE-CLIK}}^{\mathsf{IM}} = [4], \underline{\mathsf{WIND-CLIK}}^{\mathsf{IM}} = [5], \text{ and } \underline{\mathsf{SOIL-CLIK}}^{\mathsf{IM}} = [6].$ 

- 1. Route the **WIRES** from the rain sensor up through the same conduit opening used for valve wiring.
- 2. Connect the first wire to the terminal labeled SEN-1 or SEN-2.
- 3. Install the second white wire to the other SEN (COM) terminal. See chart below.

Rain	Flow Meter
Sensor	