

Connecting to Your Network

When your controller is first powered on, it will run a short wizard to connect your controller to your wireless router. If you're not using the initial startup wizard then go to the section Viewing Wireless Settings to change your wireless settings.

WIFI Checklist:	
Bandwidth	2.4 GHz only. Not compatible with 5 GHz
Router Channel	Set between 1-11
Security Type	WPA or WPA 2
Guest Networks/Networks with portal page login	Not compatible
Mac Address (If Needed)	<ul style="list-style-type: none"> • HC - Enter 001e followed by serial number (e.g., 001e05fb90ce) • HCC/HPC/PROHC - Enter f8f0 followed by serial number (e.g., f8f005fb90ce)
NOTE: The network must not contain enterprise access points that have been configured to require certificates or other forms of enterprise authentication.	

Using The Controller Wizard


1. Select your wireless network from the list shown on the controller display and press the Confirm button on the screen. **NOTE:** If your network is not listed then check that the unit is within wireless range.
2. Enter your wireless password and press the **OK** button on the keyboard. **NOTE:** Make sure you press the OK button after you've entered your password. Pressing the Home or Back buttons will not save your changes.

When connecting to your wireless, the WiFi icon at the bottom right of the controller screen will flash. Connection takes about 30 seconds and when successfully connected the WiFi

Icon will stop flashing and stay on.

Viewing Wireless Settings

From the Home screen, navigate to the Wireless Settings by pressing Settings, then Wireless.

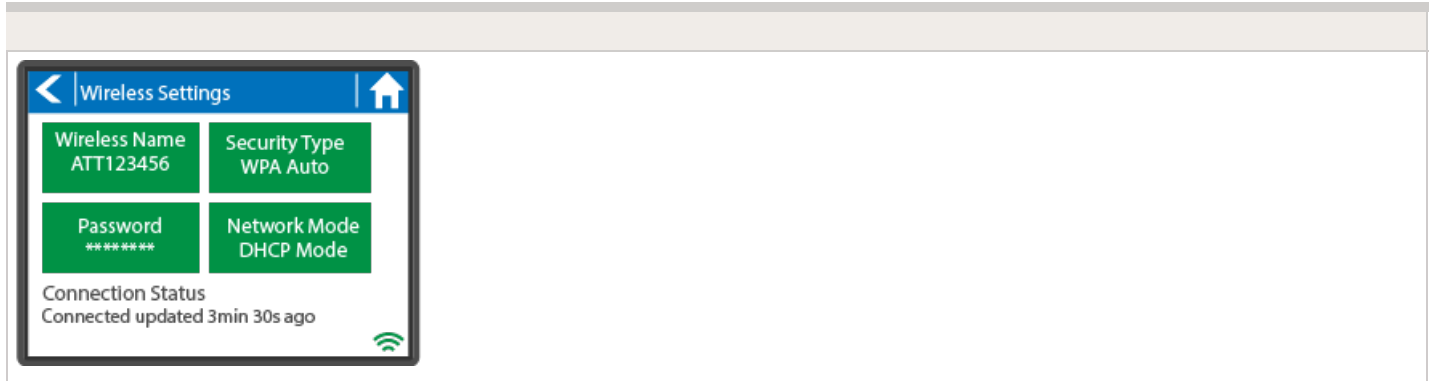


To successfully connect the Hydrowise unit to your wireless router, you will need to correctly select your wireless router, wireless security mode, and enter your wireless password.

The current status of the controller's connection to your wireless router is shown at the top of the screen. The controller will automatically attempt to connect to the configured access point if a connection is lost (for example, after power failure).

Touch on any of the green buttons to change the wireless type, security type, or password.

Configuring Wireless Name

Touching the currently configured **Wireless Name** will automatically start a scan of all local wireless routers and allow you to choose a new one.

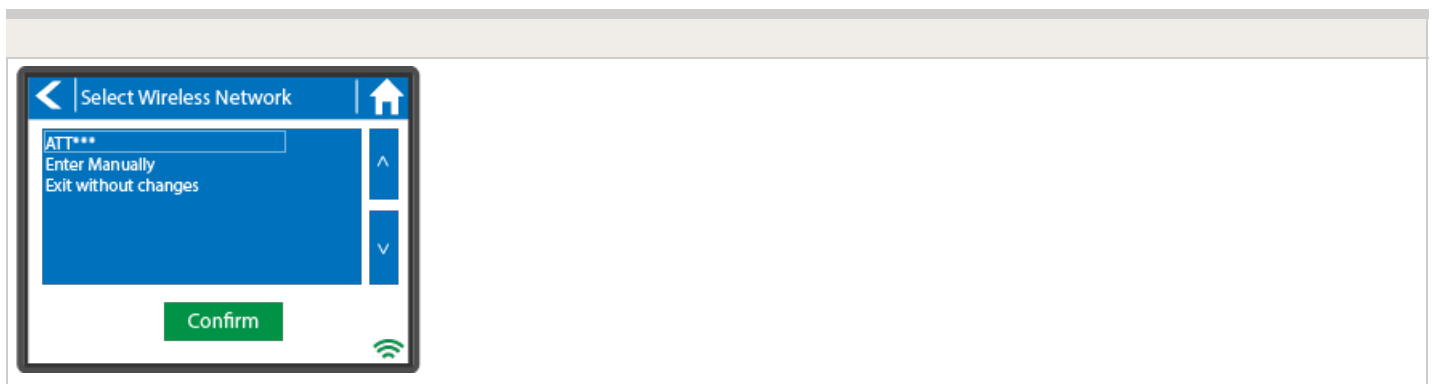

After about 5 seconds a list of found wireless networks will be listed. To select a wireless name, touch on the wireless name and then touch **Confirm**. Do not press the **Home** or

Back buttons after selecting your wireless router name – these options will not save your router name.

Each time you touch a wireless name the signal strength will be shown at the bottom of the screen.


If your wireless router is not shown then check the following –

- Your Hydrawise controller is within range of your wireless.
- Your access point is configured to accept connections from 802.11b/g wireless clients.

If your wireless router is hidden you may manually enter it by selecting **Manually enter wireless** and typing in the name.

Configuring the security type

The security type configured on the controller must match the security type configured in your wireless router. The Hydrawise unit can attempt to automatically detect this if you choose **Auto Detect** as the security type.

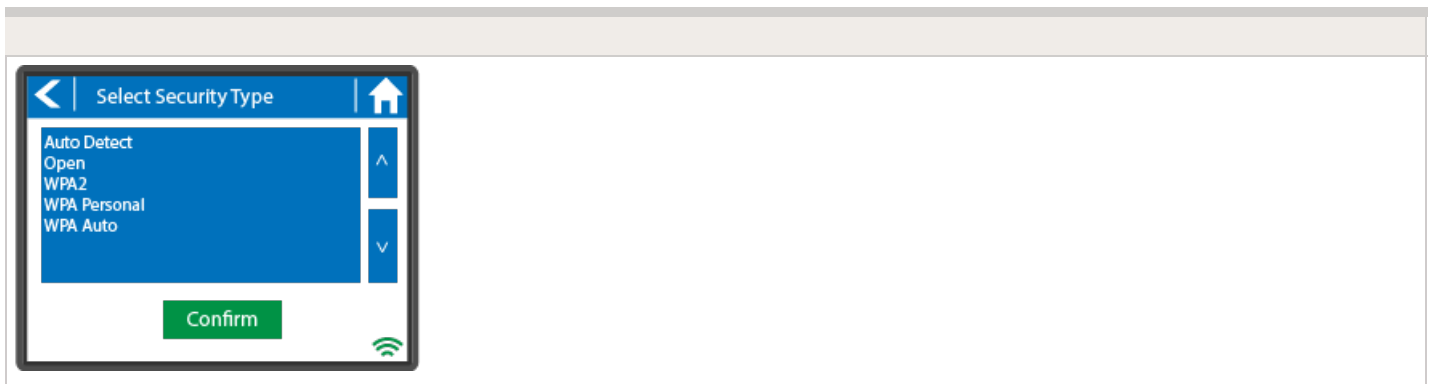


Hydrawise supports the following security types –

- Auto-Detect
- Open
- WPA2
- WPA Personal
- WPA Auto

After choosing the security type press the Confirm button.

Setting your password

For any security mode (except for Open) your wireless router password must be entered. Wireless passwords are a minimum of 8 characters and are case sensitive.

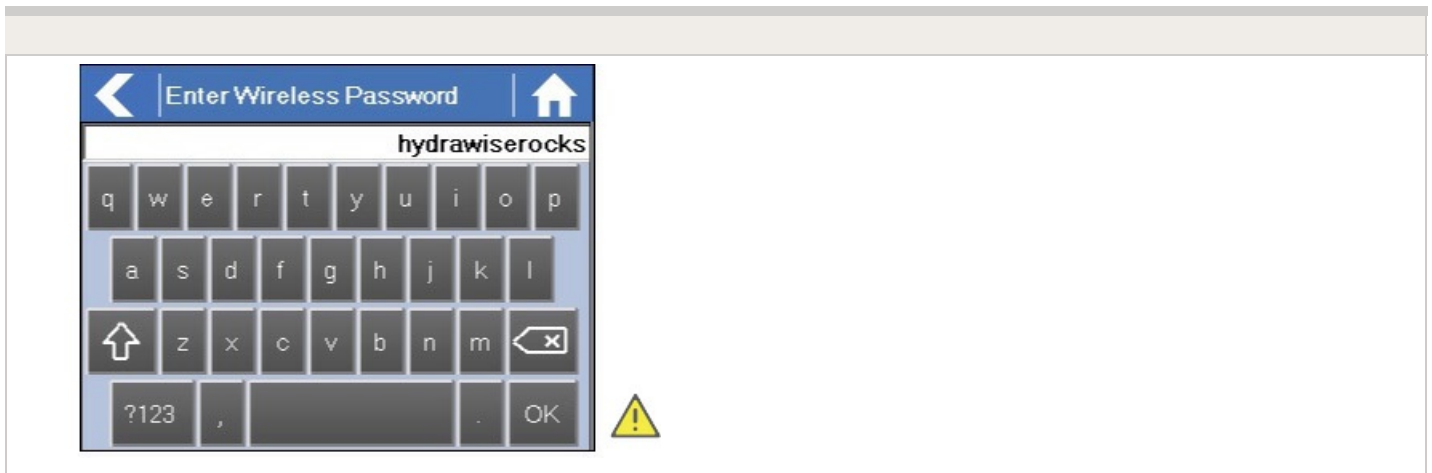

After typing in your password press the OK button. Do not press the Home or Back buttons – these options will not save your password.


Wireless Connection Status Messages

The controller will show different status messages whilst connecting to your wireless router.

Status	Description
Looking for Wireless...	The controller is currently scanning for local wireless networks.
Connecting to...	Controller is currently trying to connect to your wireless router.
Waiting for IP	The controller has connected to your wireless router and is waiting for your wireless router to give it an IP address. Your wireless router must be configured as a DHCP server.
Connected	All is good. Controller has successfully connected to your wireless router.
Local Connection Only	Controller is acting as a local wireless router.

Troubleshooting Wireless Connecting Issue

Hydrawise Ready Controllers: Wi-Fi Troubleshooting



Upon successful connection the wireless status will show Connected. If your controller fails to connect to your wireless router check the following –After entering your wireless settings the controller will connect to your access point. The connection process takes about 30 seconds.

- Your password is entered correctly. It is case sensitive and must be at least 8 characters long.
- Check that the wireless security types match between the controller and your wireless router. Hydrowise recommends use of WPA2 security between the controller and your wireless router.