


Connecting to Your Network

When your controller is first powered on, it will run a short wizard to connect your controller to your wireless router. If you’re not using the initial startup wizard, then use the below steps.

IMPORTANT: View the Wi-Fi requirements that apply to your Hunter Hydrawise-ready controller.[Learn More](#) [1]

1. From the **HOME** screen, select **SETTINGS**.
2. Select **WIRELESS**.
3. Select **WIRELESS NAME**.
4. Choose your **NETWORK**.
5. Click **CONFIRM**.
6. Enter wireless **PASSWORD**. Click **OK**. New controllers will most likely download new firmware after connection. Following the firmware download will be a controller reboot.

PASSWORD TIPS: Passwords are a minimum of 8 characters and are case-sensitive. For passwords that require an exclamation mark or capitalization, use the  button.

- 
- 
- 
- 
- 
- 

Configuring the security type

The security type configured on the controller must match the security type configured in your wireless router. The Hydrawise unit can attempt to detect this automatically if you choose **Auto Detect** as the security type.

- 

Hydrawise supports the following security types –

- Auto-Detect
- Open
- WPA2
- WPA Personal
- WPA Auto

Wireless Connection Status Messages

The controller will show different status messages while connecting to your wireless router.

Status	Description
Looking for Wireless...	The controller is currently scanning for local wireless networks.
Connecting to...	The controller is currently trying to connect to your wireless router.
Waiting for IP	The controller is connected to your wireless router and waiting for it to give it an IP address. Your wireless router must be configured as a DHCP server.
Connected	All is good. The controller has successfully connected to your wireless router.
Local Connection Only	The controller acts as a local wireless router.

Troubleshooting Wireless Connecting Issue

Hydrawise Ready Controllers: Wi-Fi Troubleshooting

Upon successful connection the wireless status will show Connected. If your controller fails to connect to your wireless router check the following –After entering your wireless settings the controller will connect to your access point. The connection process takes about 30 seconds.

- Your password is entered correctly. It is case sensitive and must be at least 8 characters long.
- Check that the wireless security types match between the controller and your wireless router. Hydrawise recommends use of WPA2 security between the controller and your wireless router.