




Controller Settings

In this section, you will be able to view and change the configuration that includes **CONTROLLER SETTINGS**, **INTERNET SETTINGS**, **REGIONAL SETTINGS**, **VALVE DELAYS**, **WEATHER STATION**, **EXPANSION MODULE INFO**, and **OFFLINE ADJUSTMENT** options.

To make adjustments to any of these settings, follow the steps below:

1. Select the mobile **MENU** icon  on the upper left-hand side of the screen. If using a computer (PC), select the **MENU** icon  on the upper right-hand side of the screen.
2. Select **CONTROLLER SETTINGS**, **INTERNET SETTINGS**, **REGIONAL SETTINGS**, **VALVE DELAYS**, **WEATHER STATION**, **EXPANSION MODULE INFO**, or **OFFLINE ADJUSTMENT** options.
3. Click the  icon to adjust each setting.

Controller Settings

Controller	Descriptions
Name - San Marcos Controller	The name of your controller.
Serial Number - 05*****	The controller's serial number. Click Remove Serial to remove the serial number and replace it with another physical controller.
Status - Linked	Linked represents the controller is attached to an account.
Model -Pro HC 12 Station Controller	Model on the actual controller.
Install Date - Sat, 06 Jul 19 18:32:34 +0000	When the controller was first connected to the internet.
Software - e.g., 4.31	Latest firmware version. This happens automatically when connected to the internet.
Programming Mode - Standard	Standard or Advanced. Learn more. ^[1]

Internet Settings	Descriptions
Offline Mode - Use static watering times	The controller will water the last program that was synced into the controller.
Hide Password - Yes/No	You have the option to hide the password on the actual controller screen.

Regional Settings	Descriptions
Timezone - America/Los_Angeles	Here you have the ability to change the time zone. This is automatically set when you set a weather station.

Delays	Descriptions
Inter Zone Delay - 0 Seconds	The number of seconds to insert between each zone watering when calculating scheduled.
Master Valve Delay - 0 Seconds	The minimum number of seconds that the master valve should be active before any zone starts.

Weather Stations

Setting your location allows your Hydrowise controller to adjust watering based on your local weather conditions.

IMPORTANT: Your weather forecasts and local weather stations are based upon your location so it is important to configure your location correctly in the application.

The chart below has the stations available based on the plan you have on your account.

- The **BLUE** station would be the station you selected in that area.
- A virtual weather station will always appear on your exact address since it is virtual and hardware at the site does not exist. For more information on virtual stations, click [here](#)

[2]

Stations	Descriptions
Personal Weather Stations - Green	Five stations can be selected on the Enthusiast plan . Click here [3] for more info.
Airport and Virtual Weather Stations - Purple	Only one station can be selected on a free Home Plan

Expansion Modules (HC Models Only)

In this section, you can view your expansion modules, and when they last made contact

with the internet. You can add a maximum of two expansion modules to a single Hunter HC controller. When you add an expansion module, you will need to give it a name and specify the ID number that you selected when setting up the module. This number needs to match the number at the physical expansion module as well.

Edit an expansion module

Expansion Module Name

This is a name for the expansion module

Expander ID

1

Each expander module has a selectable ID between 1 and 5. This must match the ID selected on the expander unit.

Cancel

OK

Offline Water Adjustments

Offline water adjustments allow the controller to automatically adjust the amount of watering on a month-by-month basis if the controller is in an Offline mode (e.g; not connected to the internet).