


Testing a Rain Sensor with a Hydrawise Controller

To verify your Hunter rain sensor is working properly, you can test the communication with a few simple tasks. This will require two steps: activating the zone, then manually activating the sensor.

Testing a Zone from the Hydrawise App

1. Log in to your **HYDRAWISE** account.
2. From the home screen, click the **REMOTE** icon () at the bottom of the app.
3. Select the **SINGLE-ZONE** option at the top dropdown.
4. Select a **ZONE** from the list. You will need to turn on one zone of the irrigation system that is visible while you are in reach of the rain sensor.
5. Change the **RUN TIME** inside the circle if desired.
6. **UNCHECK** the **IGNORE RAIN SENSOR STATUS** box ().
7. Click **START**.
8. **LOCATE** the sensor.
9. Manually **DEPRESS** the spindle at the top of the rain sensor (see image below) until you hear the switch “click” off. If the sprinkler zone stops instantaneously, it is confirmed that the operation is working correctly. If it does not shut off, please check the following:
 - Make sure the sensor is configured in the app and the wiring is correct. [Learn More](#) ^[1]
 - Make sure the jumper plate is removed from the SEN terminals if a HPC model is installed. [Learn More](#) ^[2]

Manual Test Spindle



