



# Setting Station Run Times - Standard Mode

## Overview:

The Set Station Run Times mode allows you to enter a length of run time for each station assigned to a particular program. Each station that has a run time associated with a program will be activated and operate one after another sequentially with each start time for that program. If you choose to edit the **RUN TIME** for each station (zone) in **STANDARD MODE**, please review the steps and screenshots below to access this feature.

## Steps:

- 1. Login to the Hydrowise [account](#) [1] or [app](#) [2].
- 2. Select on the **MENU**  icon on the upper left-hand side of the app. If accessing from a web browser, select the icon on the upper right-hand side.
- 3. Select **ZONES & PROGRAMS**.
- 4. Select **PROGRAMS**.
- 5. Select the  icon for the program that requires the change.
- 6. Select **NEXT 2X** in the zone details.
- 7. Click on **SELECT ALL ZONES** so they appear in the selection bar to the right.
- 8. Enter the watering **RUN TIME** in minutes for each zone. Select **DONE**, then **OK** to save.

## Instructional Media Clip:



[Next Article - Setting Water Days](#)[3]