




# Setting Station Run Times - Standard Mode

 
## Overview:

The Set Station Run Times mode allows you to enter a length of run time for each station assigned to a particular program. Each station that has a run time associated with a program will be activated and operate one after another sequentially with each start time for that program. If you choose to edit the **RUN TIME** for each station (zone) in **STANDARD MODE**, please review the steps and screenshots below to access this feature.

## Steps:

1. Login to the HydraWise [account](#) <sup>[1]</sup> or [app](#) <sup>[2]</sup>.
2. Select on the **MENU**  icon on the upper left-hand side of the app. If accessing from a web browser, select the  icon on the upper right-hand side.
3. Select **ZONES & PROGRAMS**.
4. Select **PROGRAMS**.
5. Select the  icon for the program that requires the change.
6. Select **NEXT 2X** in the zone details.
7. Click on **SELECT ALL ZONES** so they appear in the selection bar to the right.
8. Enter the watering **RUN TIME** in minutes for each zone. Select **DONE**, then **OK** to save.

## Instructional Media Clip:





[Next Article - Setting Water Days](#) <sup>[3]</sup>