


Spectrum Router Bandwidth

The latest **SPECTRUM** routers are able to broadcast both 2.4GHz and 5GHz bandwidths. Hydrawise controller models operate on the bandwidth of 2.4GHz only. To use only the 2.4GHz channel, use the steps listed below.

1. Sign in to your Spectrum router account using your **ADMIN** credentials.
2. Under the **NETWORK** tab, select **WIRELESS**.
3. Under the **BASIC** tab, change the **FREQUENCY** to 2.4GHz.
4. Under the **SSID** selection, select **YES**.
5. Select **APPLY**.

For more support on your Spectrum router, visit their support section [here](#) ^[1].

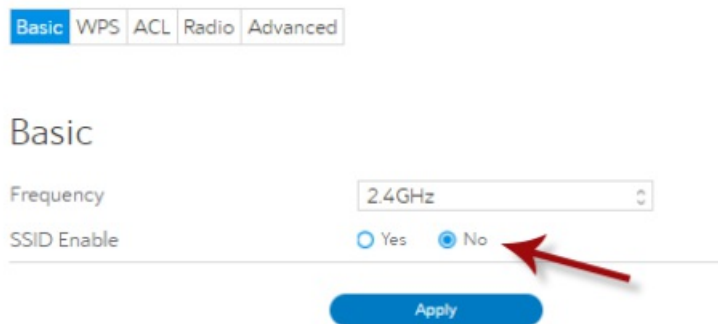

The screenshot shows the configuration interface for a Spectrum router. At the top, there are navigation tabs: Basic (highlighted in blue), WPS, ACL, Radio, and Advanced. Below the tabs, the 'Basic' section is visible. It contains a 'Frequency' dropdown menu set to '2.4GHz' and an 'SSID Enable' section with two radio buttons: 'Yes' and 'No'. The 'No' radio button is selected, and a red arrow points to it. Below these options is a blue 'Apply' button.