


Spectrum Router Bandwidth

The latest **SPECTRUM** routers are able to broadcast both 2.4GHz and 5GHz bandwidths. Hydrawise controller models operate on the bandwidth of 2.4GHz only. To use only the 2.4GHz channel, use the steps listed below.

1. Sign in to your Spectrum router account using your **ADMIN** credentials.
2. Under the **NETWORK** tab, select **WIRELESS**.
3. Under the **BASIC** tab, change the **FREQUENCY** to 2.4GHz.
4. Under the **SSID** selection, select **YES**.
5. Select **APPLY**.

For more support on your Spectrum router, visit their support section [here](#) ^[1].

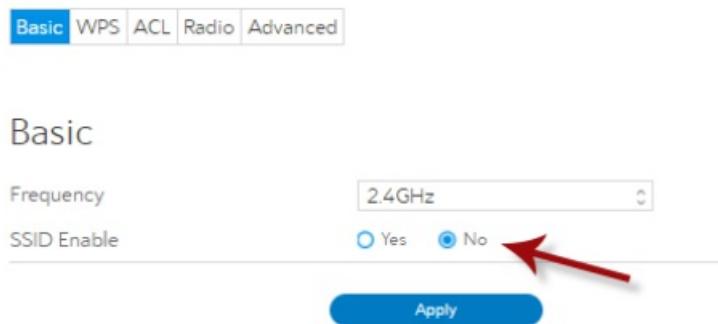

Basic WPS ACL Radio Advanced

Basic

Frequency

SSID Enable Yes No

Apply