

HCC - Connecting Sensors or Flow Meters (Optional)

The HCC Controller supports most open/closed contact types of sensors. Compatible Hunter flow meters and sensors include the HC FLOW METER [1], MINI-CLIK® [2], RAIN-CLIK™ [3], FREEZE-CLIK® [4], WIND-CLIK™ [5], and SOIL-CLIK™ [6].

1. Route the **WIRES** from the rain sensor up through the same conduit opening used for valve wiring.
2. Connect the first wire to the terminal labeled **SEN-1 or SEN-2**.
3. Install the second white wire to the other **SEN (COM)** terminal. See chart below.

