

# HCC - Connecting Sensors or Flow Meters (Optional)

The HCC Controller supports most open/closed contact types of sensors. Compatible Hunter flow meters and sensors include the [HC FLOW METER](#) [1], [MINI-CLIK®](#) [2], [RAIN-CLIK™](#) [3], [FREEZE-CLIK®](#) [4], [WIND-CLIK™](#) [5], and [SOIL-CLIK™](#) [6].

- 1. Route the **WIRES** from the rain sensor up through the same conduit opening used for valve wiring.
- 2. Connect the first wire to the terminal labeled**SEN-1 or SEN-2**.
- 3. Install the second white wire to the other**SEN (COM)** terminal. See chart below.

Rain Sensor	Flow Meter
□	□