Hunter®



Table of Contents


Table of Contents	2
Adding a Controller	3
Delete Controller	5


Adding a Controller


For information on adding a controller to your account on the PC, please see the steps and screenshots below:


- 1. Select the "My Account" drop down on the upper right hand side on the dashboard.
- 2. Select "My Controllers."
- 3. Click the + button in the my controllers section.
- 4. Add the new controller by inputting the name, serial number, location and model.
- 5. Click "create".

Plan	Max Controllers
Home Plan	3 Controllers
Enthusiast Plan	5 Controllers

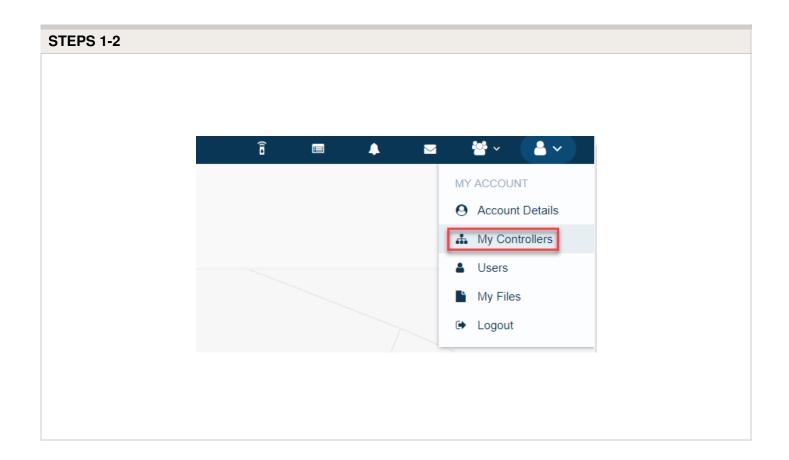

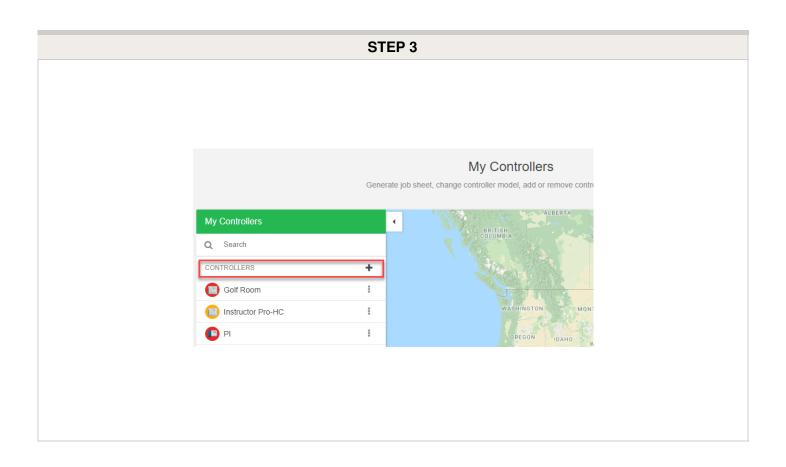

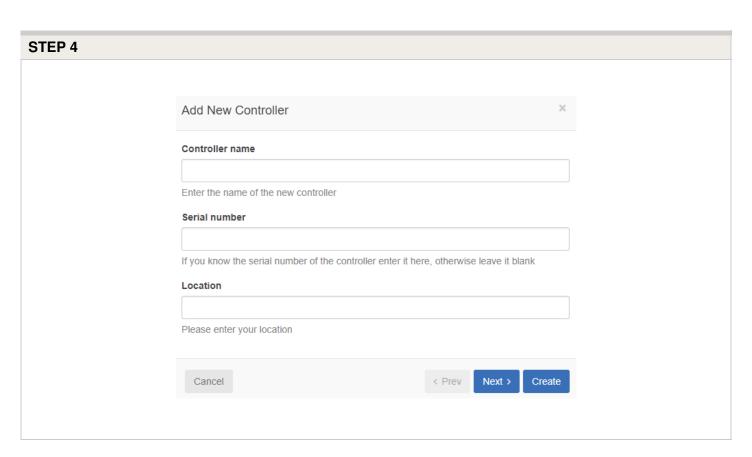

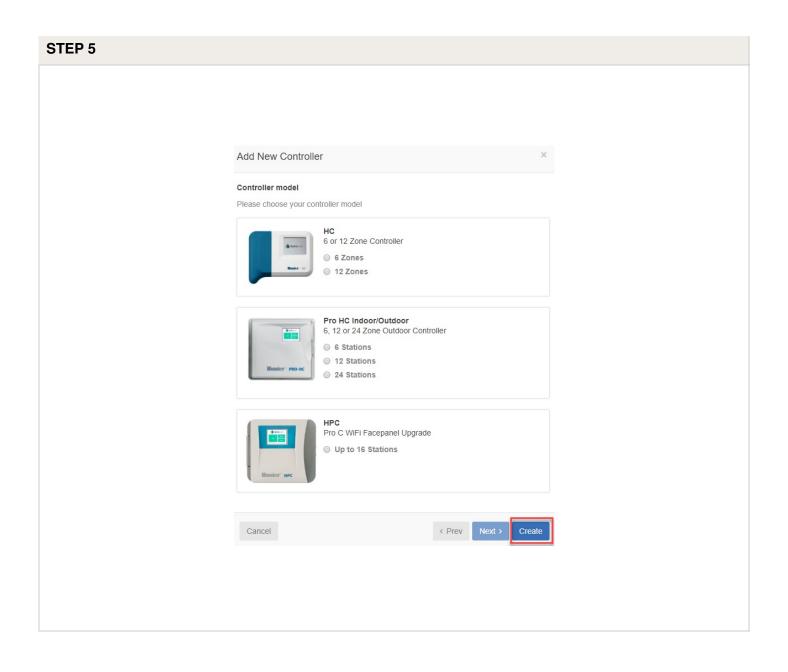

Delete Controller

If you need to delete a controller from your account, please use the steps listed below:

IMPORTANT: Ensure you are not configuring the controller that will be removed from your account.

- 1. Select the **MENU** icon () on the upper left-hand side of the app. If accessing from a web browser, click on the () on the upper right-hand side.
- 2. Scroll down to the bottom of the ACCOUNT section. Click on My CONTROLLERS.
- 3. Scroll down to view the controller that needs to be deleted. Click on the **THREE DOTS** to the right of the controller name you would like to edit.
- 4. Select **DELETE.**

The controller will now be removed from your account.