


Why is my flow meter reading so high?

There are two things to consider when this occurs:


- 1) Check that you have the right flow meter installed and selected via the flow meter setup on the software. If you have a 3/4" but selected 1", the reading can appear up to 10x higher than it should be.
- 2) Carefully follow the instructions in our wiring guide.

Wire Color	Sensor Terminal Block
White	Common
Blue	SEN1 or SEN2
Red	Not Used

Ensure that the common wire is connected to the sensor common and not the common for the valve, as this will cause massive spikes in readings. **DO NOT USE THE RED WIRE, must cap off.**

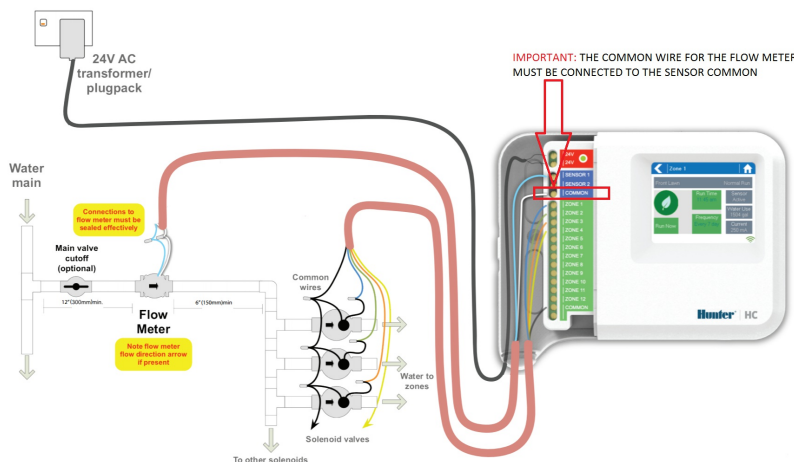

IMPORTANT: THE COMMON WIRE FOR THE FLOW METER MUST BE CONNECTED TO THE SENSOR COMMON

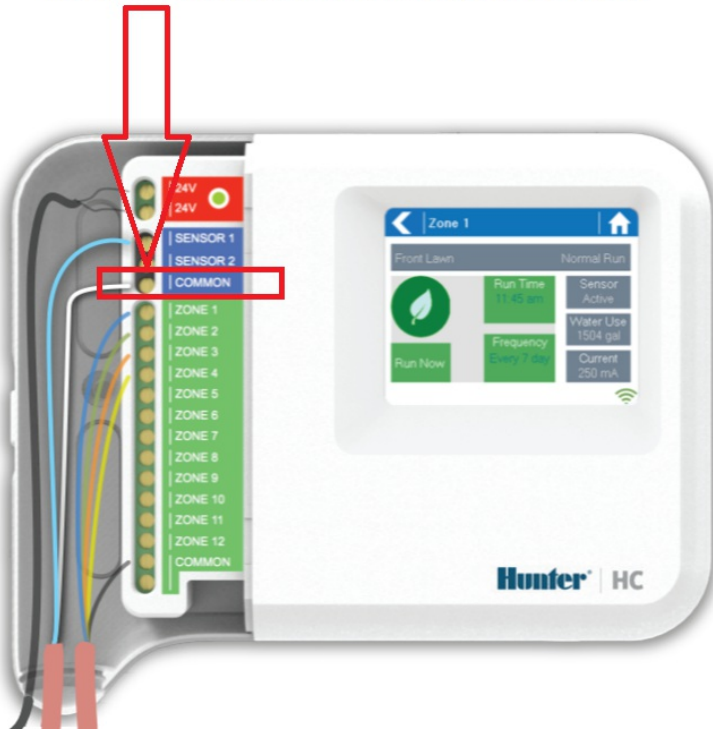

For a more detailed look at our flow meter installation guide, click [here](#) ⁽¹⁾.